


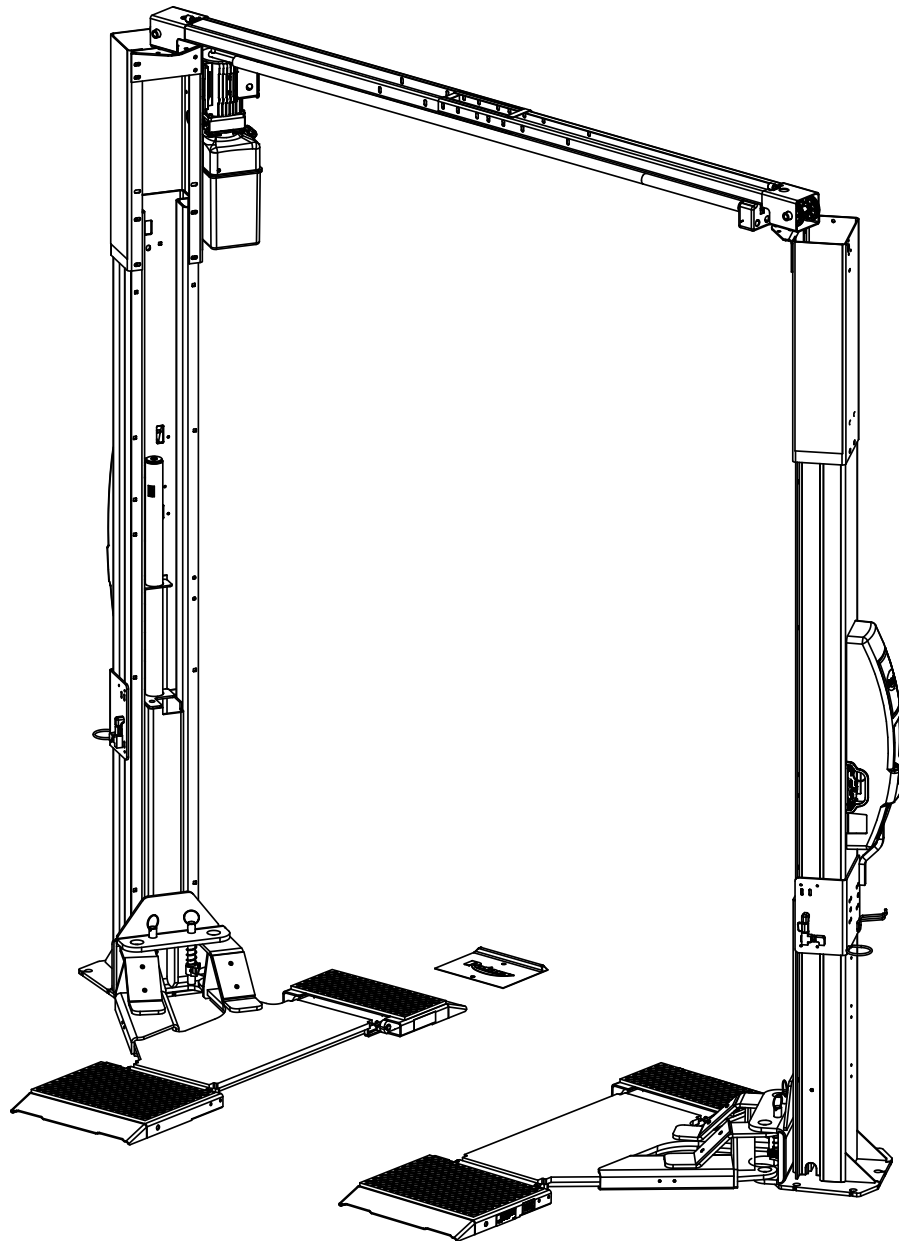

Moveable Pad Rubber Feet



INSTALLATION INSTRUCTIONS


When installing the Rubber Feet onto the Moveable Pads and the floor is level, washers will not be necessary.

- Insert the 1 $\frac{3}{4}$ " long flat head machine screw through a Rubber Foot from the counter bored side.
- Insert the screw up through the hole in the weldment and thread it into the weld nut.
- Hand tighten the screw. Do not use an impact wrench. This should provide $\frac{1}{4}$ " space between the floor and the Pad frame.
- Repeat the process for all eight holes in the Pad weldments.


When installing the Rubber Feet onto the Moveable Pad and the floor is not level, washers will be required to obtain the proper extension of the Rubber Feet in order to keep the Pads level. The 2 $\frac{1}{2}$ " long flat head screws are provided for this. This will provide up to $\frac{3}{4}$ " farther extension of the Rubber Feet.

- Insert the 2 $\frac{1}{2}$ " long flat head machine screw through a Rubber Foot from the counter bored side.
- Place a supplied $\frac{3}{8}$ " fender washer over the screw and run a supplied $\frac{3}{8}$ "-16NC nut down against the washer.
- Place the required number of washers for leveling over the screw and against the nut. Seven washers (maximum number of washers with this screw length) should provide 1" space between the floor and the Pad frame.
- Insert the screw up through the hole in the weldment and thread it into the weld nut.
- Adjust by adding or removing washers to obtain the required amount of levelness.
- Hand tighten the screw. Do not use an impact wrench.
- Repeat the process for all eight holes in the Pad weldments.
- Lift up the pad and cut or grind off the amount of the screws that extends through the weld nuts so that nothing protrudes above the upper surface of the weld nuts.

Un-Level Floor

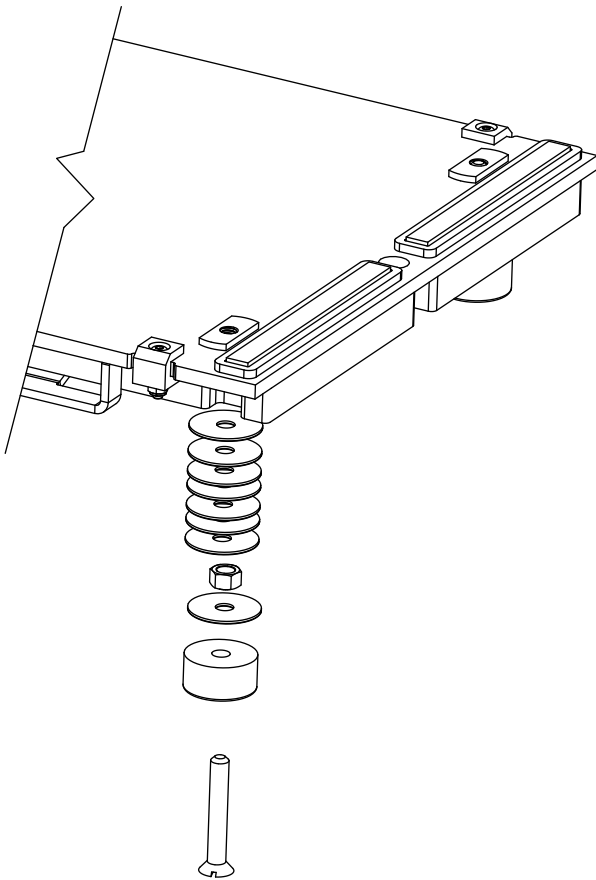

Level Floor

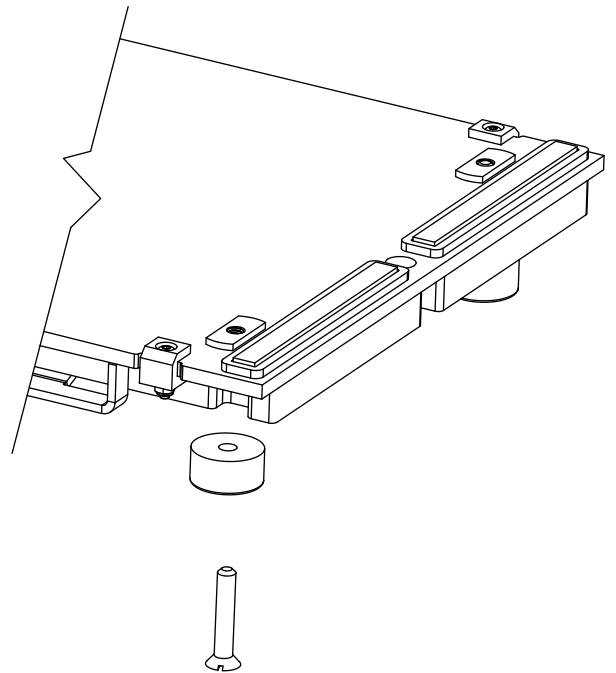

Rotary World Headquarters

2700 Lanier Drive
Madison, IN 47250, USA
www.rotarylif.com

North America Contact Information

Tech. Support:

p 800.445.5438
f 800.578.5438
e userlink@rotarylif.com

Sales:

p 800.640.5438
f 800.578.5438
e userlink@rotarylif.com

World Wide Contact Information

World Headquarters/USA: 1.812.273.1622
Canada: 1.905.812.9920
European Headquarters/Germany: +49.771.9233.0
United Kingdom: +44.178.747.7711
Australasia: +60.3.7660.0285
Latin America / Caribbean: +54.3488.431.608
Middle East / Northern Africa: +49.771.9233.0

© Vehicle Service GroupSM

Printed in U.S.A., All Rights Reserved. Unless otherwise indicated, ROTARY, and all other trademarks are property of Dover Corporation and its affiliates.

